



800-428-8560
midwesthomes4pets.com
3142 S. Cowan Rd.
Muncie, Indiana 47302



Assembly Instructions for Model Number 130

IMPORTANT INFORMATION

Remove collars, tags, and leads from pet before placing it in the pen to prevent possible entanglement.

Unwrap and remove all parts from the box. Keep the box and packing material until the product is assembled. In case of return or exchange, failure to return product in similar condition as received could result in limited reimbursement. Please save sales receipt as proof of purchase for warranty purposes. Check to ensure you have all the parts below. If you discover any parts are missing, immediately call our toll-free service helpline at 1-800-428-8560 (Monday - Friday 9 a.m. to 4 p.m. EST) or email us at info@midwesthomes4pets.com.


To protect the finish of your playpen and the bottom pan, use only mild, non-abrasive cleaners and water. Any coarse scrubbing or abrasive materials could damage the finish.

For instructions in Spanish and French, please visit www.midwesthomes4pets.com.


PARTS IDENTIFICATION

NOTE: You will need a Phillips head screwdriver for assembly.

A. Playpen - Wire Structure **B.** Plastic Pan **C.** Shelf (3) **D.** Bed (1) **E.** Casters (4)

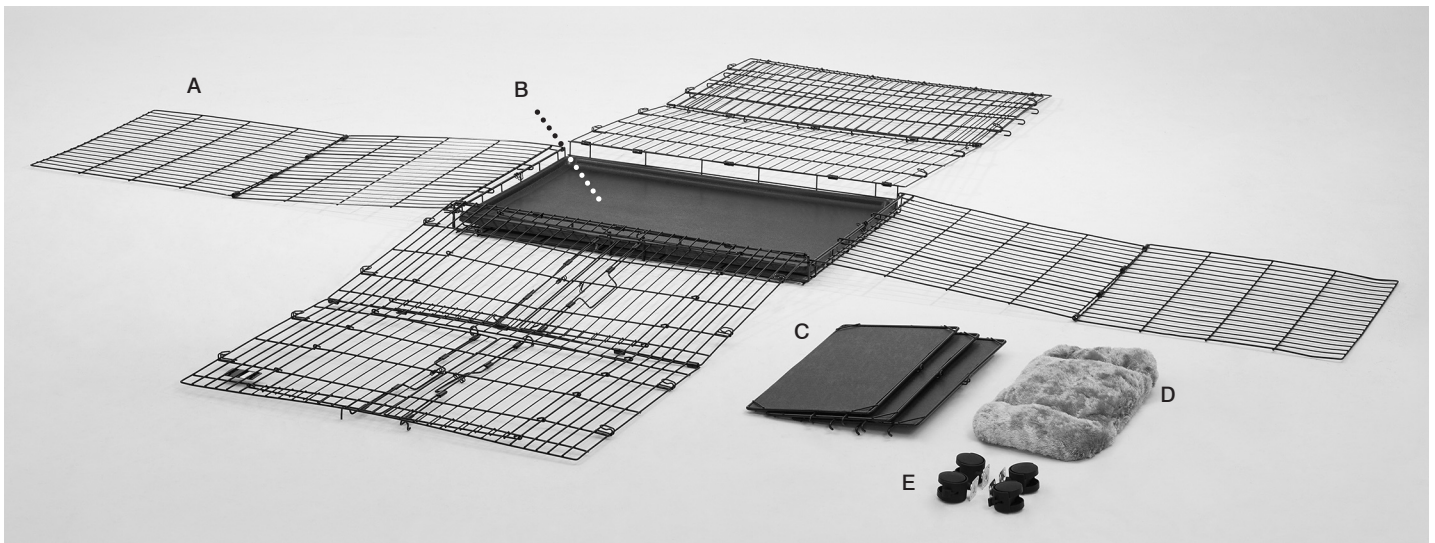


F. Plastic Caster Plate (4) **G.** Steel Caster Plate (4) **H.** Screws (16)
I. Lock Washers (16) **J.** Washers (16) **K.** Nuts (16)

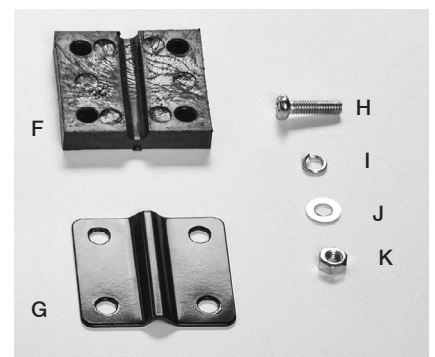


ASSEMBLY INSTRUCTIONS

Note: You will need a large floor space to assemble your playpen. Although it can be assembled by one person, due to its size, you may find it easier to assemble the playpen with two people.


1. Remove the folded pen from the carton and cut the plastic ties.

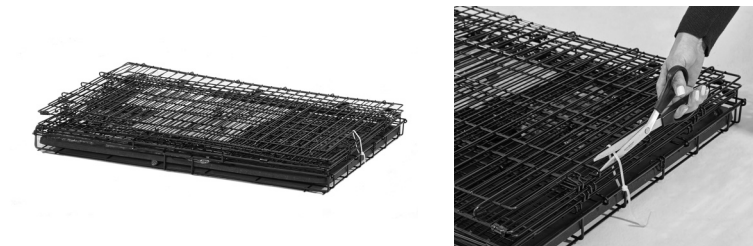


2. Slowly unfold the pen, laying the front, back, and side panels out on the floor. Remove the shelves, bed, casters, and hardware bag and set those items aside.

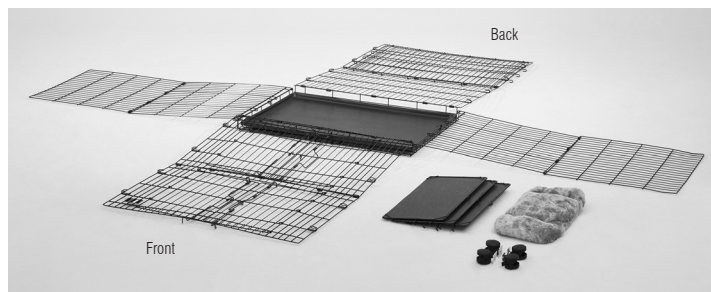

3. Lift the Back Panel and Side Panel into the upright position. NOTE: The Top Panel is attached to the Back Panel and it should hang on the outside of the pen until Step 9.

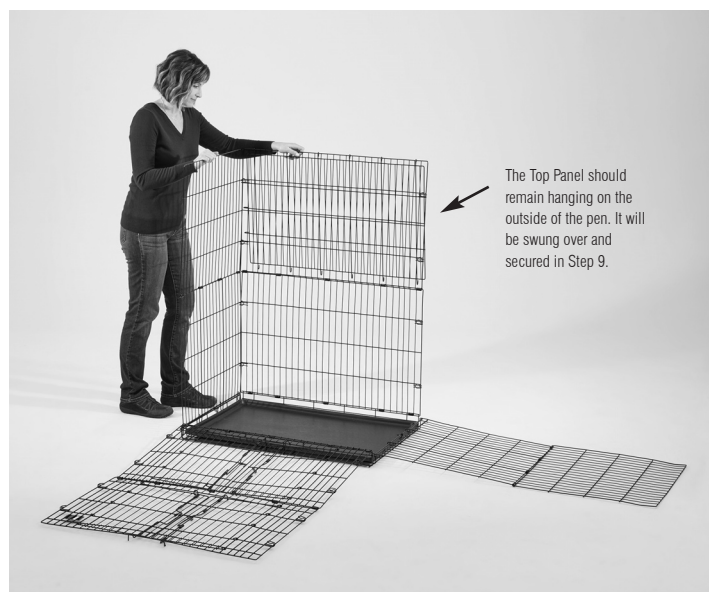

4. The Back Panel has four rounded hooks. Lift the Side Panel up and over the hooks until it is fully secured in each hook as shown.

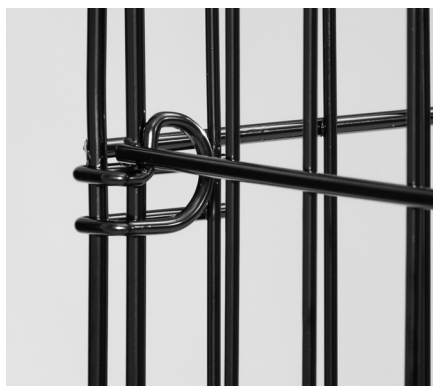

5. Before moving to Step 6, be sure the bottom of the Back Panel is rolled to the inside of the pen as shown. If you must roll it from the outside to the inside, be sure to double check that the hooks you secured in Step 4 did not become disengaged.




6. Lift the other Side Panel into the upright position. Lift and lower the Side Panel, securing it into the hooks of the Back Panel as you did in Step 4.



7. Before moving to Step 8, take a moment to roll the mid-section of the panels. The mid-section of the Side Panels should be rolled to the outside of the pen. The mid-section of the Back and Front Panels should be rolled to the inside of the pen.



The mid-section of the Side Panels should be rolled to the outside of the pen.

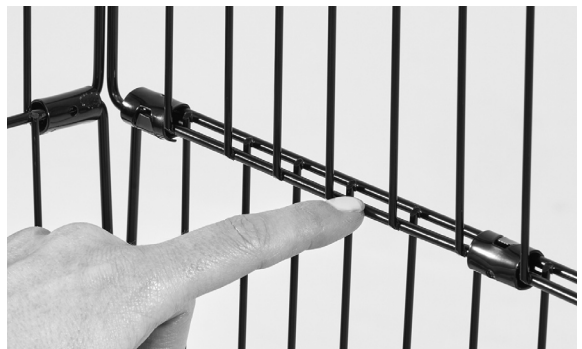

The mid-section of the Back and Front Panels should be rolled to the inside of the pen.

8. Lift the Front Panel into the upright position. As you did in Step 5, make sure the bottom of the Front Panel is rolled to the inside of the pen. The Front Panel has four rounded hooks on each side. Lift and lower each Side Panel into the hooks of the Front Panel as you did in Step 4.

Hook the “S” clips on the base, on each side of the pen, around the lowest horizontal wire of the Side Panel for added stability.



9. Swing the Top Panel up and over the pen.



10. Secure the Top Panel to the Front Panel first. Wrap each hook on the Top Panel around the top wire of the Front Panel. There is a bent “U” shaped wire in the middle of the Top Panel; this should go on the inside of the Front Panel.



Wrap the four hooks on the Top Panel around the top wire of the Front Panel.



The bent “U” shaped wire should be secured on the inside of the Front Panel.

- 11.** Next, secure each End Panel to the Top Panel. Each End Panel has two hooks, one in the front and one in the back; secure these over the Top Panel. The Top Panel has a hook in the middle; secure this over the End Panel.





Wrap the hooks on the Side Panels over the Top Panel.



Wrap the middle hook of the Top Panel over the End Panel.



- 12.** Attach the casters. The casters will be placed in the four corners of the base on two intersecting wires. NOTE: It might be helpful to tilt the pen or lay it on its side for this step. Place the Plastic Plate (F) on the underside of the intersecting wires so the bottom wire fits in the “channel.” Place the Steel Plate (G) on the top so the wire also fits in the “channel.” Place the Caster (E) up against the Plastic Plate so all the holes align. Insert a Screw (H) in the top of each hole in the Steel Plate. From the underside, place a Washer (J), then a Lock Washer (I), up the threads of the Screw until they reach the Caster’s metal plate. Secure the Screw and Washers with a Nut (K).

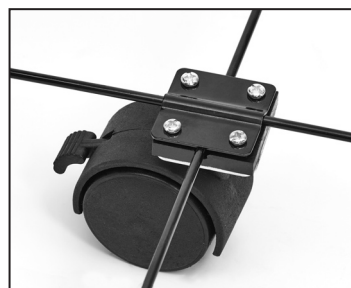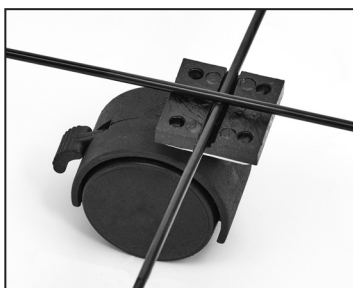


- 13.** Attach the bed to one of the shelves by looping the hook & loop tabs through the wires in the corners of the shelf and securing them on the underside of the bed. Place the shelves in the desired location within the pen. The shelves hook to the horizontal wires in the front and back of the pen. Be sure to engage the safety hook on the long side of the shelf around the Side Panel.




Safety Hook

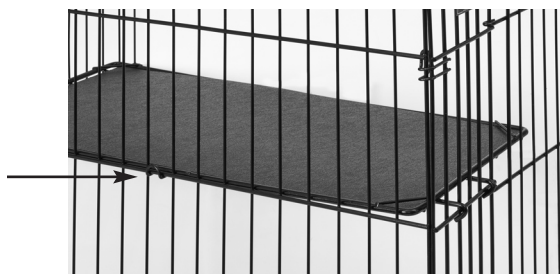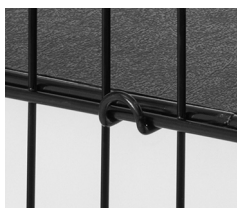

- 14.** Your Cat Playpen features two sets of large double doors. To open a door, use the handle to lift the rod up, then rotate the handle to disengage the swivel locks and swing the door open. To lock the door, lift the handle to raise the rod, close the door, then rotate the handle and lower the rod until the swivel locks loop around the corresponding horizontal wires. For added security, a Safety Hook is attached to the door that will secure the handle in place.

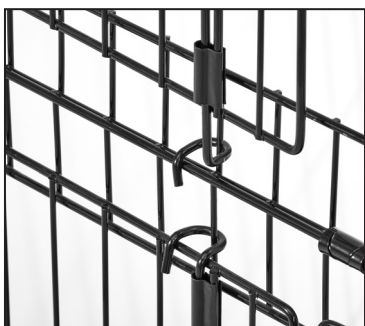


Pictured: Lower swivel lock on the top door and upper swivel lock on the bottom door. The loops should intersect the horizontal wires to secure the doors shut.

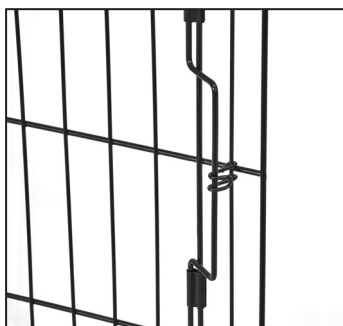

The Safety Latch attaches to the handle for added security.



- 15.** The Cat Playpen also features a removable, easy-to-clean plastic pan. The pan stop secures the pan in place. To remove the pan, disengage the pan stop from the bottom horizontal wire of the front panel and remove the pan. When the pan is in the pen, always be sure the pan stop is secured.

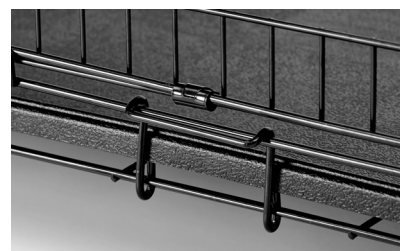

TOLL-FREE SERVICE HELPLINE: If you have any problems or questions with the assembly of your Cat Playpen call our Service Helpline at: 1-800-428-8560 between 9:00 a.m. and 4:00 p.m. (EST) Monday through Friday.

LIMITED MANUFACTURER'S WARRANTY

- For one (1) year from the date of original purchase, MIDWEST Homes For Pets ("MIDWEST") warrants to the purchaser of this playpen that, should it prove defective by reason of improper workmanship and/or material, MIDWEST will repair or replace, at its option, any defective part of the playpen, without charge for the part or for shipping. Replacement parts are warranted for the remainder of the original period.
- THIS WARRANTY DOES NOT COVER defects in the playpen caused by any animal, any physical abuse to or misuse of the playpen, any damage caused by the original purchaser or any third party, or any defects arising or discovered more than one (1) year from the original retail purchase date.
- STEPS TO OBTAIN WARRANTY SERVICE:
 - The purchaser must call MIDWEST's HELPLINE, 800-428-8560, to report the alleged defect to a customer service representative or obtain missing parts.
 - The customer service representative will determine if the defect is covered by this warranty, and if it is, will authorize and instruct the purchaser in how to obtain corrective action.
 - MIDWEST may require the purchaser to present the sales receipt or other proof of purchase prior to authorizing any return or replacement. No returns or replacements will be permitted without proper authorization. If a return or replacement is authorized, you may be requested to return the item to MIDWEST or to make the item available for pickup by MIDWEST.
- ANY EXPRESS WARRANTY NOT PROVIDED IN THIS WARRANTY DOCUMENT, AND ANY REMEDY FOR BREACH OF CONTRACT THAT, BUT FOR THIS PROVISION, MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF ONE (1) YEAR. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.
- UNDER NO CIRCUMSTANCES SHALL MIDWEST BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU.
- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For a Complete Listing of Products
Cat Furniture • Pet Beds • Exercise Pens
Feed Bowls • Pet Gates . . .
 - Come Visit Our Website
www.midwesthomes4pets.com

